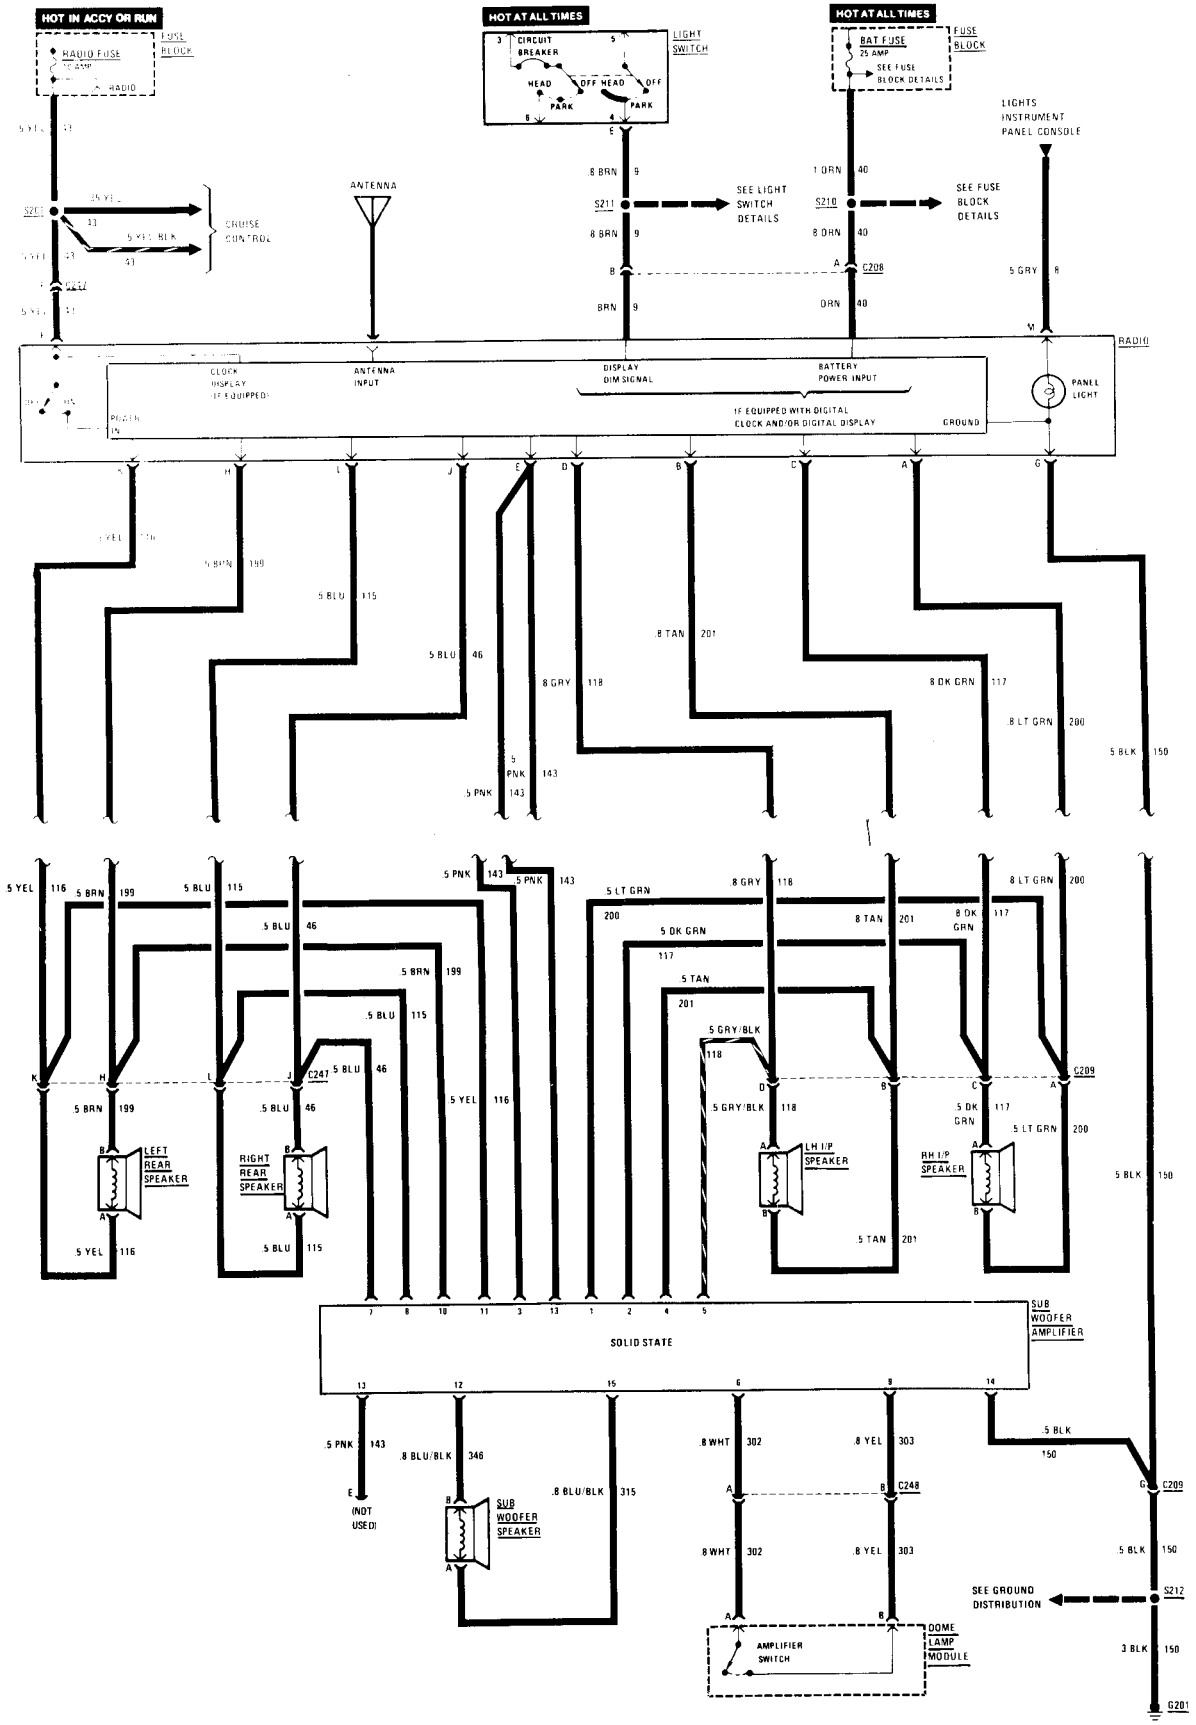
HOT IN ACCY OR RUN
HOT AT ALL TIMES
HOT AT ALL TIMES
RADIO FUSE
FUSE BLOCK
RADIO
CIRCUIT BREAKER
LIGHT SWITCH
HEAD
OFF
PARK
BAT FUSE
25 AMP
SEE FUSE BLOCK DETAILS
LIGHTS INSTRUMENT PANEL CONSOLE
ANTENNA
CRUISE CONTROL
SEE LIGHT SWITCH DETAILS
SEE FUSE BLOCK DETAILS
S211
S210
C208
RADIO
CLOCK DISPLAY (IF EQUIPPED)
ANTENNA INPUT
DISPLAY DIM SIGNAL
BATTERY POWER INPUT
IF EQUIPPED WITH DIGITAL CLOCK AND/OR DIGITAL DISPLAY
GROUND
PANEL LIGHT
C247
C209
LEFT REAR SPEAKER
RIGHT REAR SPEAKER
LH I/P SPEAKER
RH I/P SPEAKER
SOLID STATE
SUB WOOFER AMPLIFIER
(NOT USED)
SUB WOOFER SPEAKER
C248
AMPLIFIER SWITCH
DOME LAMP MODULE
SEE GROUND DISTRIBUTION
S212
G201

Radio